



**Century Sports, Inc., Exclusive Court Equipment Licensee for  
Wilson Sporting Goods Co.**

1995 Rutgers University Blvd., P.O. Box 2035, Lakewood, NJ 08701-8035

800-526-7548 732-905-4422 Fax 732-901-7766  
Email [centurysportsinc@cs.com](mailto:centurysportsinc@cs.com)

## **Assembly Instructions #3124W Teaching Cart**

**Tools required: Large screwdriver and 7/16" (or adjustable) wrenches.**

1. Place cart frame on floor with open tubing ends upward. Open wheel bag and place wheels into tubing, making sure to align all holes. Using the shorter bolts from the wheel bag, attach the wheels, making sure that bolts are pointed towards the inside of the cart frame.
2. Rotate cart frame (to wheels on floor) and center basket. Using four of the slotted roundhead bolts and nuts, attach basket to cart frame through the two outside holes in each metal strap. Make sure that all bolts are faced from inside of the basket to the outside, to avoid skinning knuckles when reaching inside for balls. Manually tighten. After all nuts are in place, tighten bolts securely with screwdriver.
3. Hold handle on inside of basket against metal plates. Place four remaining slotted roundhead bolts through handle and holes in metal plates. Again, make sure that all bolts are faced from inside of the basket to the outside, to avoid skinning knuckles when reaching for balls. Secure with remaining nuts, manually tightening only. After all nuts are in place, tighten bolts securely with screwdriver.
4. Snap lid in place on top front bar of basket.

Wheel maintenance: Keep wheel, axle and casters free of debris at all times to prevent wheels from sticking and flat spotting. Simply remove axle bolt and clean thoroughly. Reassemble.

**WARNING**  
**Never allow children to ride or play on teaching cart.**

