


233 / 3150R COURT DRYERS

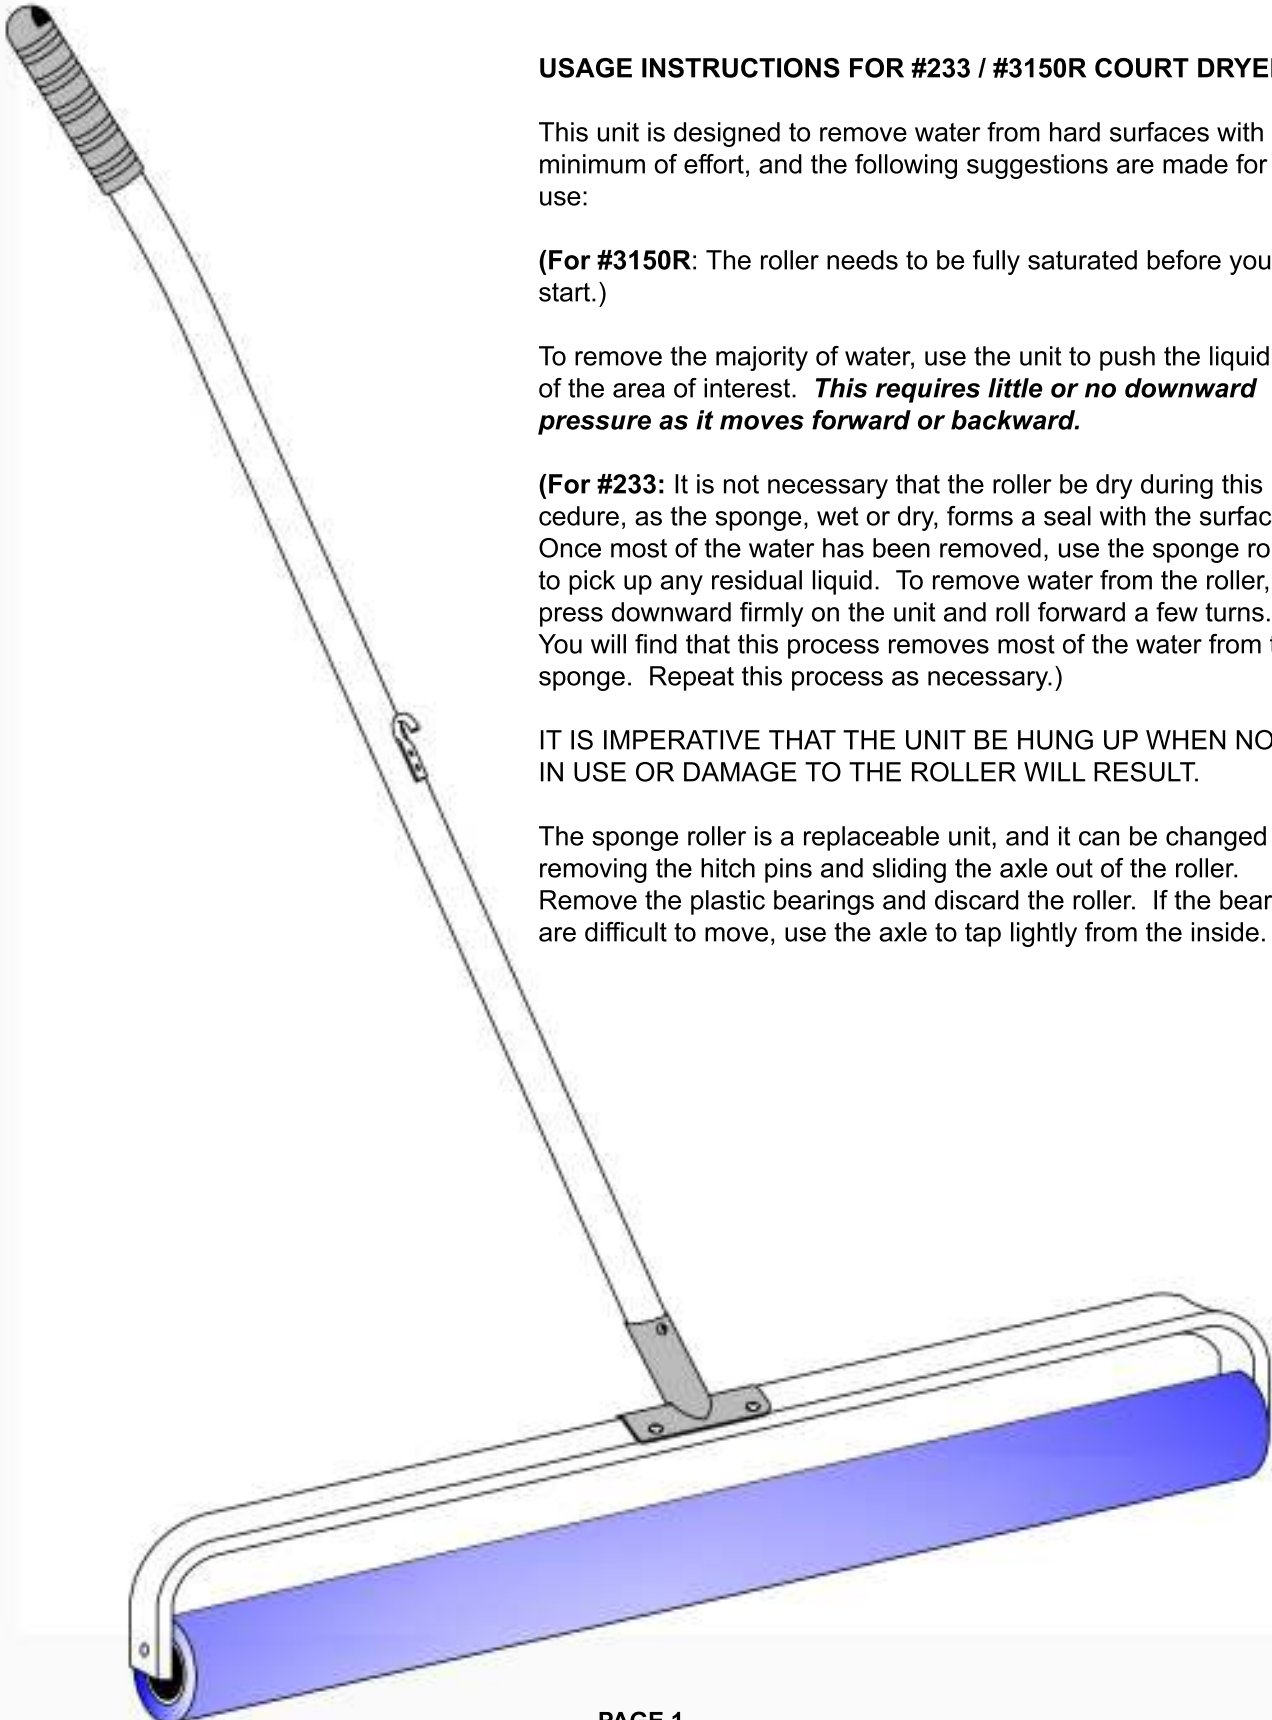

USAGE INSTRUCTIONS FOR #233 / #3150R COURT DRYERS

This unit is designed to remove water from hard surfaces with a minimum of effort, and the following suggestions are made for its use:

(For #3150R: The roller needs to be fully saturated before you start.)

To remove the majority of water, use the unit to push the liquid out of the area of interest. ***This requires little or no downward pressure as it moves forward or backward.***

(For #233: It is not necessary that the roller be dry during this procedure, as the sponge, wet or dry, forms a seal with the surface. Once most of the water has been removed, use the sponge roller to pick up any residual liquid. To remove water from the roller, press downward firmly on the unit and roll forward a few turns. You will find that this process removes most of the water from the sponge. Repeat this process as necessary.)

IT IS IMPERATIVE THAT THE UNIT BE HUNG UP WHEN NOT IN USE OR DAMAGE TO THE ROLLER WILL RESULT.

The sponge roller is a replaceable unit, and it can be changed by removing the hitch pins and sliding the axle out of the roller. Remove the plastic bearings and discard the roller. If the bearings are difficult to move, use the axle to tap lightly from the inside.

WATER REMOVER

ITEM	DESCRIPTION	QTY	PART #
A	ROLLER	1 EA	#3151R #208S
B	FRAME	1 EA	
C	AXLE	1 EA	#3076
D	HITCH PIN	2 EA	
E	BEARING	2 EA	
F	HANDLE ASSEMBLY - COMPLETE	1 EA	#3077
G	REPLACEMENT END CAPS	2 in. Dia. 4 in. Dia.	#3070 #3075

